

Handleiding

Austroflamm Eerste Opstart

Deze handleiding wordt u aangeboden door www.climacraft.nl —
service en onderhoud voor pelletkachels,
van Almere tot Harderwijk, Amersfoort, Utrecht, Mijdrecht,
Zaandam en Purmerend.

Storing, onderhoud of keuring nodig?

Plan direct een afspraak op climacraft.nl/afspraak




4. EERSTE OPSTART

- Verwijder de accessoires uit de pelletcontainer en de verbrandingskamer.
- Vul de pelletcontainer met pellets en sluit het deksel.
- Verwijder het plastic strookje uit het moederbord (zie *foto 1*). Indien dit niet gebeurt zal de melding A004 (batterij leeg) continu zichtbaar zijn op het display.
Dit is niet van toepassing op Clou, Clou Compact en Clic.
Type batterij: CR2032.
- Steek de stekker in het stopcontact en zet de hoofdschakelaar aan.
Bij toestellen met een display stel je nu eerst en vooral datum en tijd correct in. Indien je dit niet doet zal het menu STATISTIEKEN niet werken en blijft alles gewoon op 0 staan.
- Vul de worm via MANUELE TOEVOER indien het toestel over een display beschikt of druk op het verborgen knopje onder het vuldeksel indien het toestel over een draaiknop beschikt.
- Bij de eerste start zal het toestel misschien zwart branden. Dit komt doordat er nog wat vocht in de keramott stenen zit. De zwarte aanslag op het glas en de binnenstenen is dan als normaal te beschouwen.
TIP: breng het toestel langzaam op temperatuur door maximum vermogen 3 te gebruiken tijdens het 1^e uur stoken. Zo kan het vocht langzaam uit de stenen verdwijnen zonder dat de binnenstenen barsten.
- Kijk bij de eerste opstart ook zeker na of er wel voldoende pellets vallen in de START 1 fase. Na START 1 moet de branderpot voldoende gevuld zijn.
De pellets moeten de opening van de bougie zeker volledig bedekken (de pellets mogen tot +/- 1 boven de opening van de bougie komen, zie *tekening 2*).
Indien nodig PAR 70 verhogen.
- Vul het "Commissioning report" in en stuur deze volledig ingevuld naar service@unifire.be

Foto 1



Tekening 2

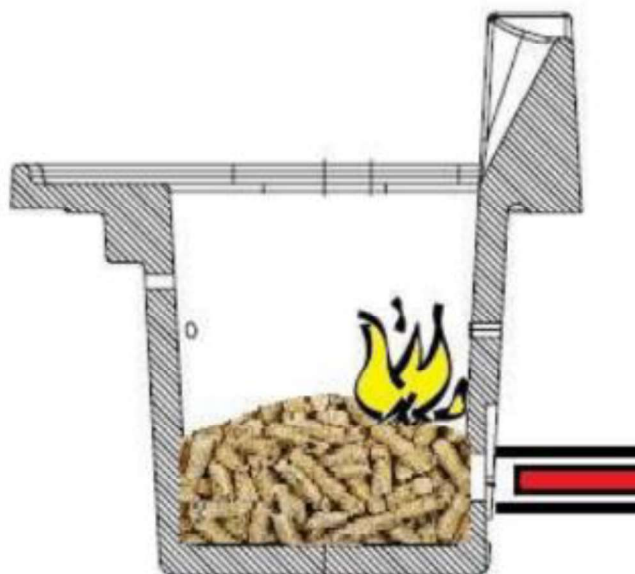

COMMISSIONING REPORT FOR "PELLET STOVE"

Operator/Customer		Retailer/Technician	
Name		Company	
Street		Street	
Postcode	Town/City	Postcode	Town/City
Telephone		Telephone	
Email		Email	

Pellet Stove

MODEL	Software version control unit	
Serial number	Software version operating panel	
Technical defects	Software version WLAN box	
Visual defects	WLAN module ☐ Yes ☐ No	
Accessories (e.g.: SMART SPOT, AIR DISTRIBUTION MODULE, ...)		

On-Site Conditions

Socket earthed (see test certificate for electrical installation)		Number of deflectors:	
Firebox door seal inspected		Total length of the flue pipes:	
Miscellaneous		Flue pipes in plug-in system ☐ with sealing lip ☐ without sealing lip	
Chimney type ☐ Brick ☐ Stainless steel ☐ Fireclay		Sea level:	
Diameter of chimney: Height of chimney:		Chimney draught – Actual value: Target value: 3–12 Pa	
Chimney – Approved by chimney sweep: ☐ Yes ☐ No		Diameter of the flue pipe:	
Controlled domestic ventilation: ☐ Yes ☐ No		Outside temperature during draught measurement:	

Appliance - Preparation for Start, Function Test

Pellet hopper full		Function of "induced draught fan" tested	
Pellet quality : e.g. Önorm/DIN plus/ENplus A1		Function of "worm gear motor" tested	
"Riddling grate" function tested		Function of "ignition cartridge" tested	
Keramott "fired white"		Partial load test carried out	

Instructions for the Operator/Customer

Handling of the appliance explained intelligibly		Cleaning and maintenance interval explained	
Warranty terms and conditions, and coverage explained		Photographic documentation of the CURRENT state of the "pellet stove installation" (Please be sure to obtain the customer's consent beforehand!)	
Wire brush ☐ Glove ☐ Operating Manual ☐		Trial heating of the appliance and switching it off jointly with the customer.	

The end customer hereby confirms that he/she can now put the stove into operation without assistance. He/she further confirms that the pellet stove has been handed over in a fully functional state and is free of defects.

Location, date

Signature of Operator/Customer

Signature of Technician